

isdn4bsd

isdnd configuration – general

- location: /etc/isdn/isdnd.rc (change using "-c" flag for isdnd)
- three sections:
 - one "system" section: general (isdnd) configuration
 - no, one or more "controller" sections: controller conf
 - one or more "entry" sections: connection configuration
- read at startup; reread "<CR>R" in fullscreen mode or SIGHUP

